



SHT-6

Time switch with DCF control



Contents

Warning	3
Characteristics	4
Technical parameters	5
Device description	6
Symbol, Connection, Load	8
Mode precedence, Language settings	9
Menu overview	10
Control description	11
Time and date setting	12
Time program	14
Setting the switching modes	18
Setting options	20
Overview of time zones	22
Reset	23
An example of SHT-6 programming	24
Battery replacement	25

Warning

E
N



Device is constructed for connection in 1-phase main alternating current voltage and must be installed according to norms valid in the state of application. Connection according to the details in this direction. Installation, connection, setting and servicing should be installed by qualified electrician staff only, who has learnt these instruction and functions of the device. This device contains protection against overvoltage peaks and disturbancies in supply. For correct function of the protection of this device there must be suitable protections of higher degree (A, B, C) installed in front of them. According to standards elimination of disturbancies must be ensured. Before installation the main switch must be in position "OFF" and the device should be de-energized. Don't install the device to sources of excessive electro-magnetic interference. By correct installation ensure ideal air circulation so in case of permanent operation and higher ambient temperature the maximal operating temperature of the device is not exceeded. For installation and setting use screw-driver cca 2 mm. The device is fully-electronic - installation should be carried out according to this fact. Non-

problematic function depends also on the way of transportation, storing and handling. In case of any signs of destruction, deformation, non-function or missing part, don't install and claim at your seller it is possible to dismount the device after its lifetime, recycle, or store in protective dump.

Internal circuits and sensor circuits are not galvanically isolated from the mains. No product circuits, including sensor circuits, can be considered as ELVs.

Cable shield to the sensor, fulfills a functional purpose in terms of EMC does not fulfill any protection or safety function and it is not associated with any EP protection. It is not possible to touch the shield as well as the other product wiring circuits!

Security against electric shock is ensured by reinforced insulation product, cable, sensors and their correct and professional installation.

The cable must be of a suitable dimension to meet the parameters to provide protection in the area of the over-voltage category III.

Characteristics

Time switch with DCF control is used for the automatic real-time controlling of appliances. The timer operates all year round without the need for continuous maintenance, with minimum operating costs and maximum savings of electrical energy (for example for turning on heating, pumps, ventilators, public lighting etc.). Appliances can be controlled in regular time cycles or based on a pre-set programme.

Time switch SHT-6 is synchronized by a DCF77 signal using external receiver DCRF-1. Time switch can operate independently without a DCF receiver. In the case of a power supply interruption, the timer retains all set values required for its reliable activation after power is restored.

- Switching modes:

- **AUTO** – automatic switching mode:

- **PROGRAMME**  – switching based on a programme (astro or time).

- **RANDOM**  – switches randomly in a 10–120 minute interval.

- **HOLIDAY**  – holiday mode – option of setting up a period for which the timer will be blocked, i.e. will not switch based on the set programmes.

- **MANUAL**  – manual mode – option of controlling the individual output relay manually

- Options of the automatic switching programme:

- **TIME PROGRAMME** – switching based on a pre-set time programme
 - Memory capacity for 100 time programmes (common for both channels).
 - Programming can be performed both when power is on or in backup mode.
 - Output relays only operate with a supply voltage of AC 230 V.
 - Menu display selection – CZ / SK / EN / ES / PL / HU / RU (default factory setting EN).
 - Selection of automatic switching between summer / winter time based on location.
 - Backlit LCD display.
 - Simple and easy setup using 4 control buttons.
 - Sealable transparent cover on the front panel.
 - The timer has a backup battery that preserves data in case of a power supply failure (reserve backup time up to 3 years).
 - Supply voltage: AC 230 V.
 - 2-module, mounted onto a DIN rail, clamping terminals.
- After plugging the timer in for the first time, the current time, date and geographic location must be set for correct operation of the clock.
Settings can be done:
- manually: only if the DCF signal is disabled
 - automatically: if the receiver DCFR-1 is connected and DCF signal is enabled.

Technical parameters


EN

Supply terminals:	A1 - A2	<u>Other information</u>	
Supply voltage:	AC 230V / 50 - 60Hz	Operating temperature:	-10.. +55 °C
Supply voltage tolerance:	-15 %; +10 %	Storage temperature:	-30.. +70 °C
<u>Output</u>		Electrical strength:	4 kV (supply - output)
Number of contacts:	1x changeover (AgSnO ₂)	Operating position:	any
Rated current:	16 A / AC1	Mounting:	DIN rail EN 60715
Switching capacity:	4000 VA / AC1, 384 W / DC	Protection degree:	IP10 clips, IP40 from front panel
Peak current:	30 A / <3s	Oversupply category:	III.
Switching voltage:	250 V AC1 / 24 V DC	Pollution degree:	2
Mechanical life:	> 3x10 ⁷	Max. cable size (mm ²):	solid wire max. 2x 2.5 or 1x 4 with sleeve max. 1x 2.5 or 2x 1.5
Electrical life (AC1):	> 0.7x10 ⁵	Dimensions:	90 x 35.6 x 64 mm
<u>Time circuit</u>		Weight	121 g (without battery)
Real time back-up:	up to 3 years	Standards:	EN 61812-1, EN 61010-1
Accuracy			
- without DCF receiver:	max. ±1s/ day at 23°C		
Minimum interval:	1 min.		
Data stored for:	min. 10 years		
<u>Program circuit</u>			
Number of memory places:	100		
Program:	daily, yearly (up to year 2099)		
Data readout:	LCD display, with back light		

Device description

Connectors for the DCFR-1 receiver

Supply voltage terminal A1

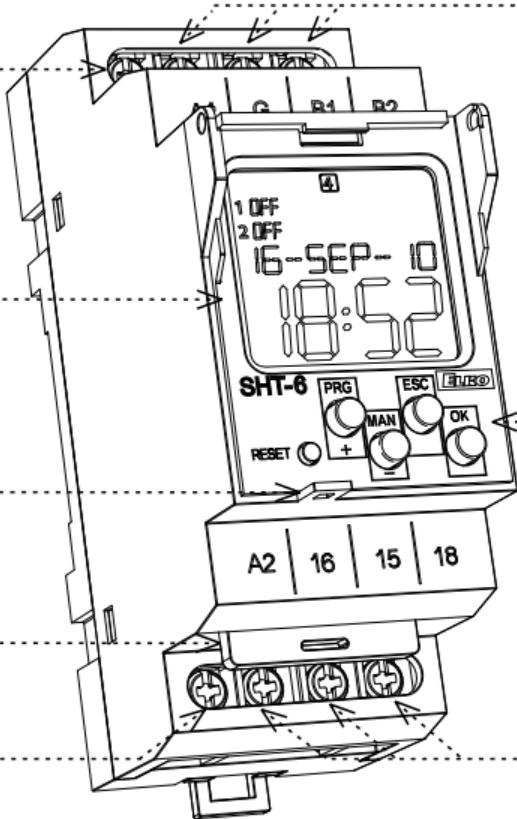

Display with back-light


Control buttons

Place for seal

Plug-In with battery backup

Supply voltage terminal A2

Output - channel (16-15-18)

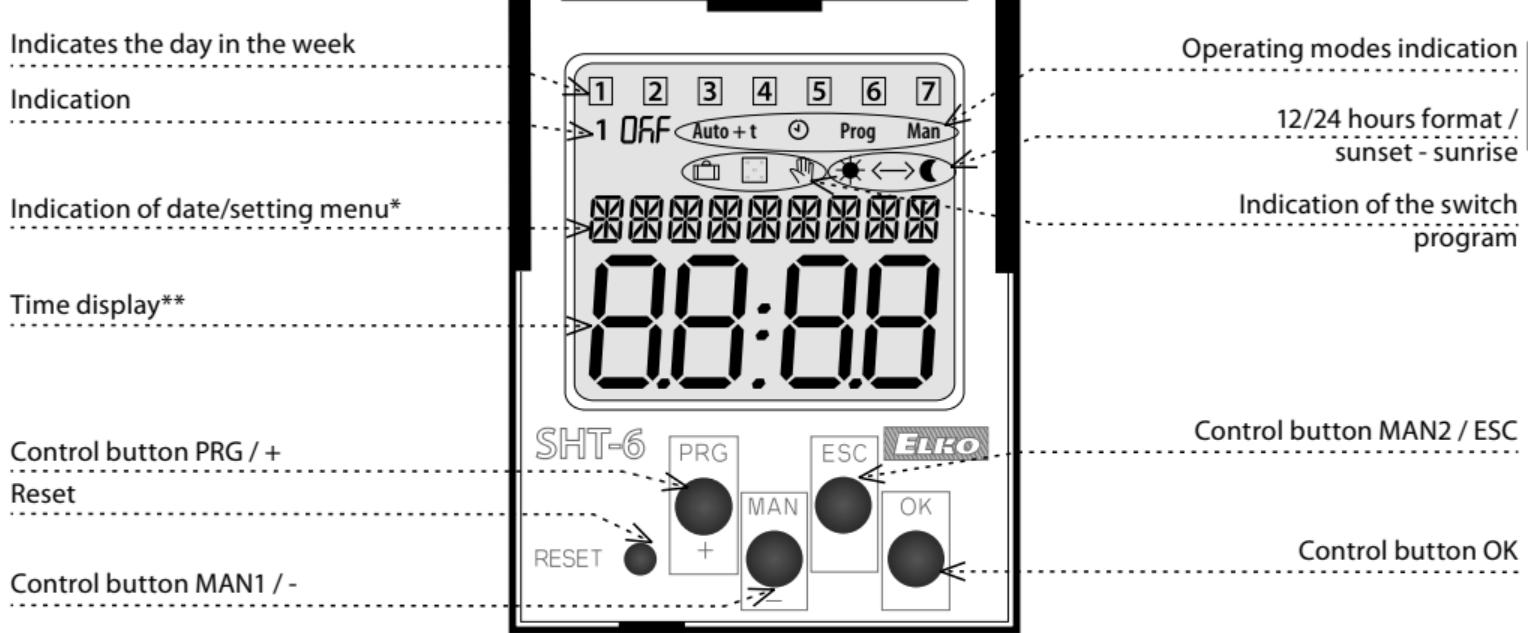

CONTROL OF A DISPLAY WITH BACKLIGHT

Power on: Display is illuminated with a backlight for 10 seconds from the last button press. The display continuously shows the settings – date, time, day of the week, contact state and programme. Permanent on / off is activated by simultaneous presses of the MAN, ESC, OK buttons. After activating the permanent on/off, the display will flash briefly.


Backup mode: After 2 minutes, the display switches to the sleep mode, i.e. shows no information. The display can be activated by pressing any button.

* Displaying the date or status of DCF signal (switches after 4 s) status of DCF signal:
Prohibited DCF reception: DCF Flashes OFF


Allow DCF reception: good signal - DCF OK
bad or no signal - DCF BAD

** If the time is not set, the time indication is flashing. If the time is set (manually or automatically), the time indication lights permanently.

Symbol

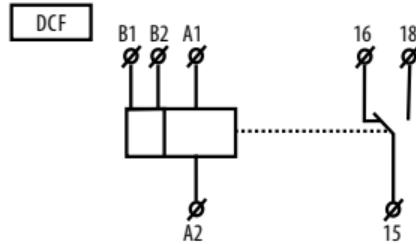

Connection

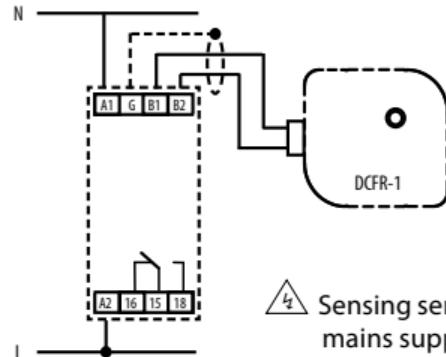

Load


Type of load						
Contact material AgSnO ₂ Contact 16A	AC1 $\cos \varphi \geq 0.95$	AC2 250V / 5A	AC3 250V / 3A	AC5a Uncompensated	AC5a 230V / 3A (690VA) max. input C=14uF	AC5b HAL.230V 1000W
Type of load						
Contact material AgSnO ₂ Contact 16A	AC6a 250V / 16A	AC7b 250V / 5A	AC12 x	AC13 250V / 3A (690VA)	AC14 250V / 6A	AC15 250V / 6A
Type of load						
Contact material AgSnO ₂ Contact 16A	DC1 24V / 10A	DC3 24V / 3A	DC5 24V / 2A	DC12 24V / 6A	DC13 24V / 2A	DC14 x

Mode precedence


EN

Mode precedence	display	output mode
mode with the highest priority	>>> <i>ON / OFF</i>	manual control
>>	<i>ON / OFF</i>	holiday mode
>	<i>ON / OFF</i>	time program Prog


Language settings

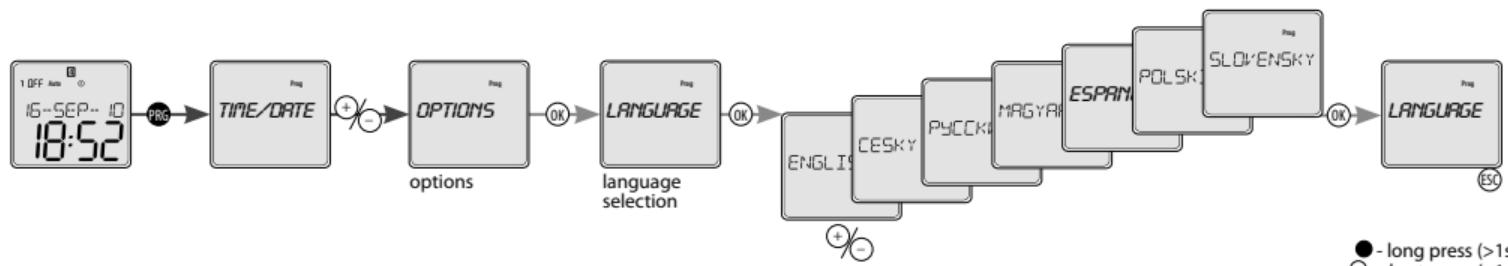

Menu overview

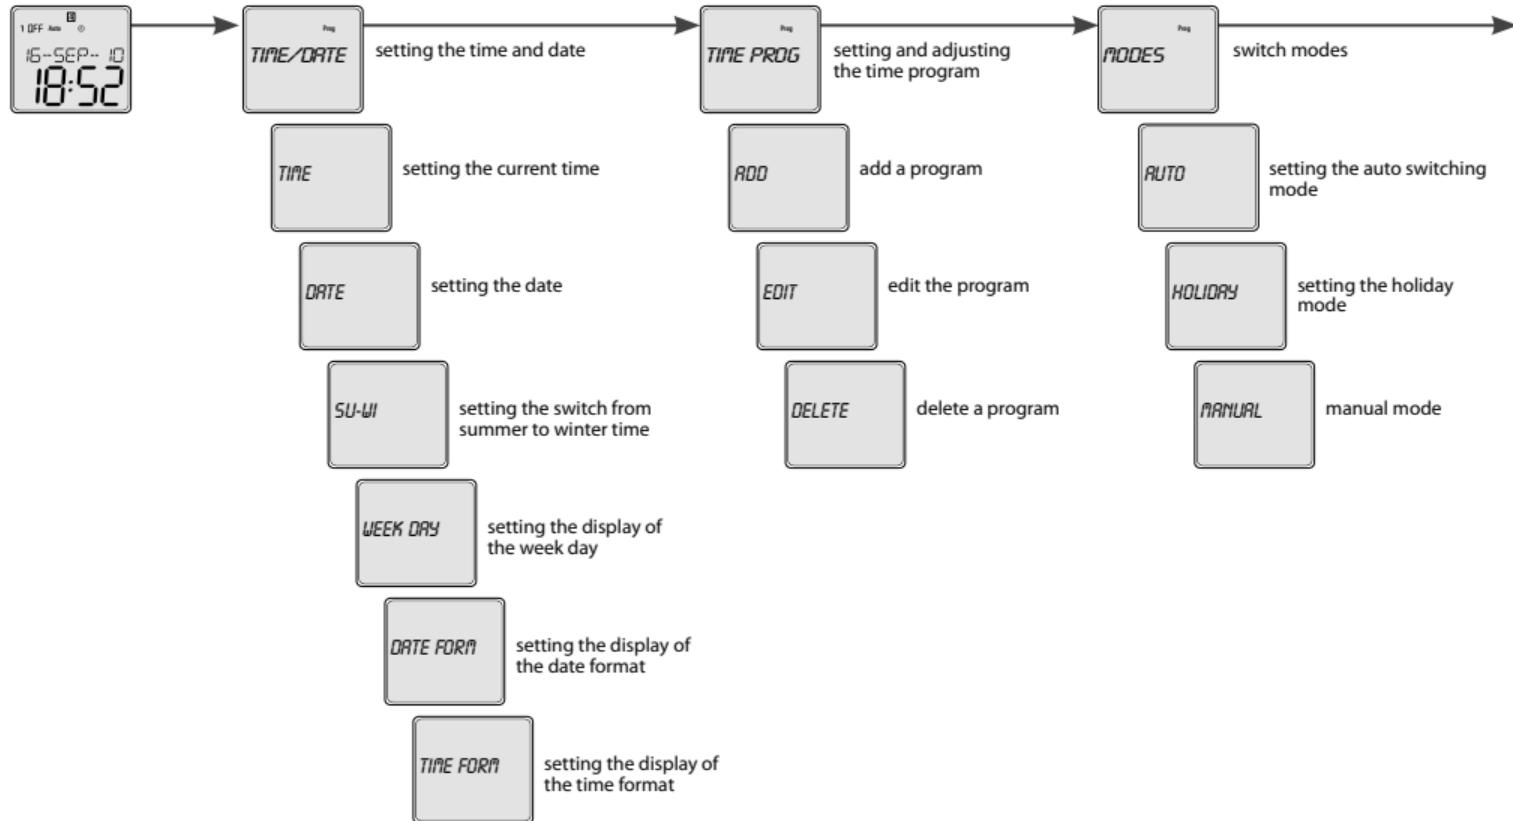

Control description

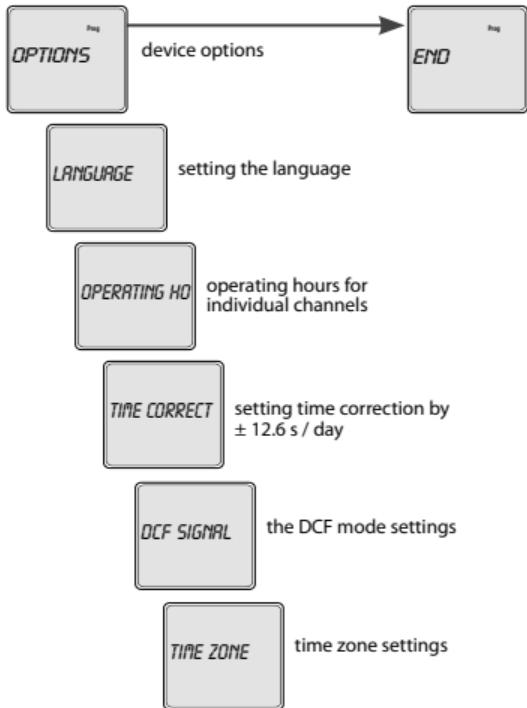


Device differs short and long button press. In the manual marked as:


- - short button press (<1s)
- - long button press (>1s)

After 30s of inactivity (from the last press of any button) will device automatically returns into starting menu.

	PRG	enter the programming menu
	%	browsing in menu
	+/-	setting of values
	OK	quick shifting during setting of values
	ESC	enter the required menu
		confirmation
	UP	one level up
		a step back
	DOWN	back to the starting menu


TIME/DATETIME and date setting



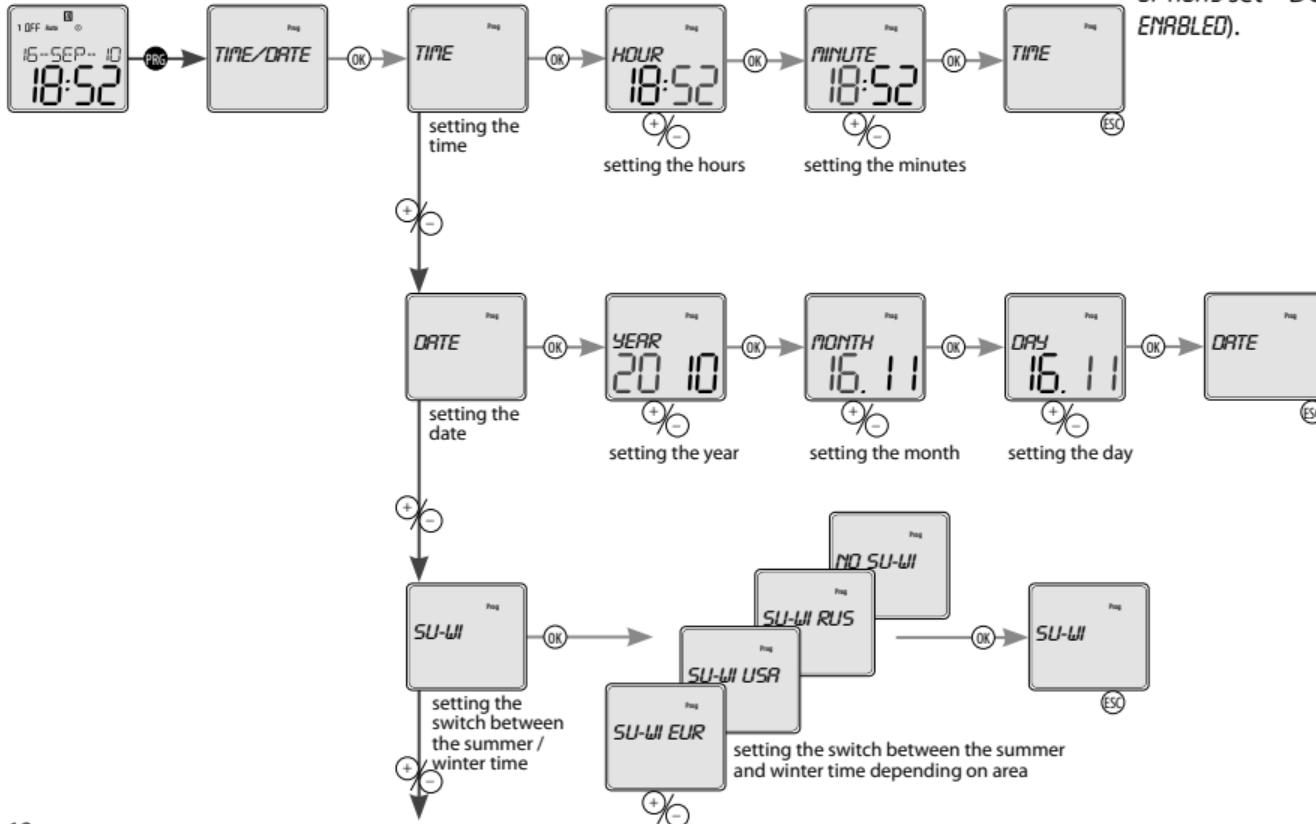


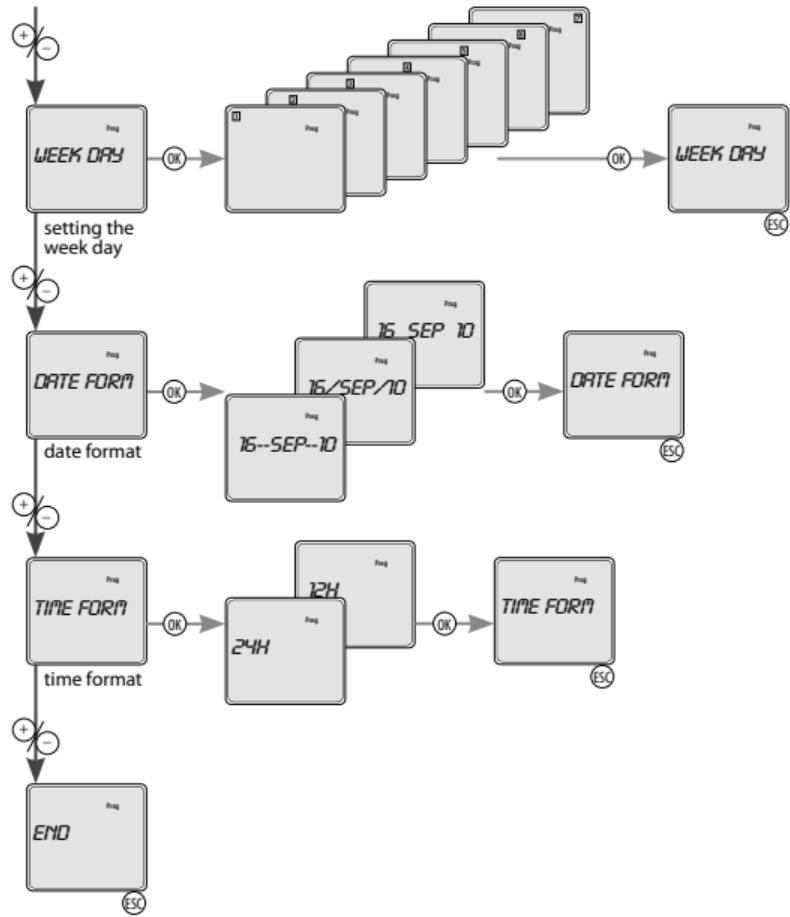


● - long press (>1s)
○ - short press (<1s)

TIME PROGRAM Time program

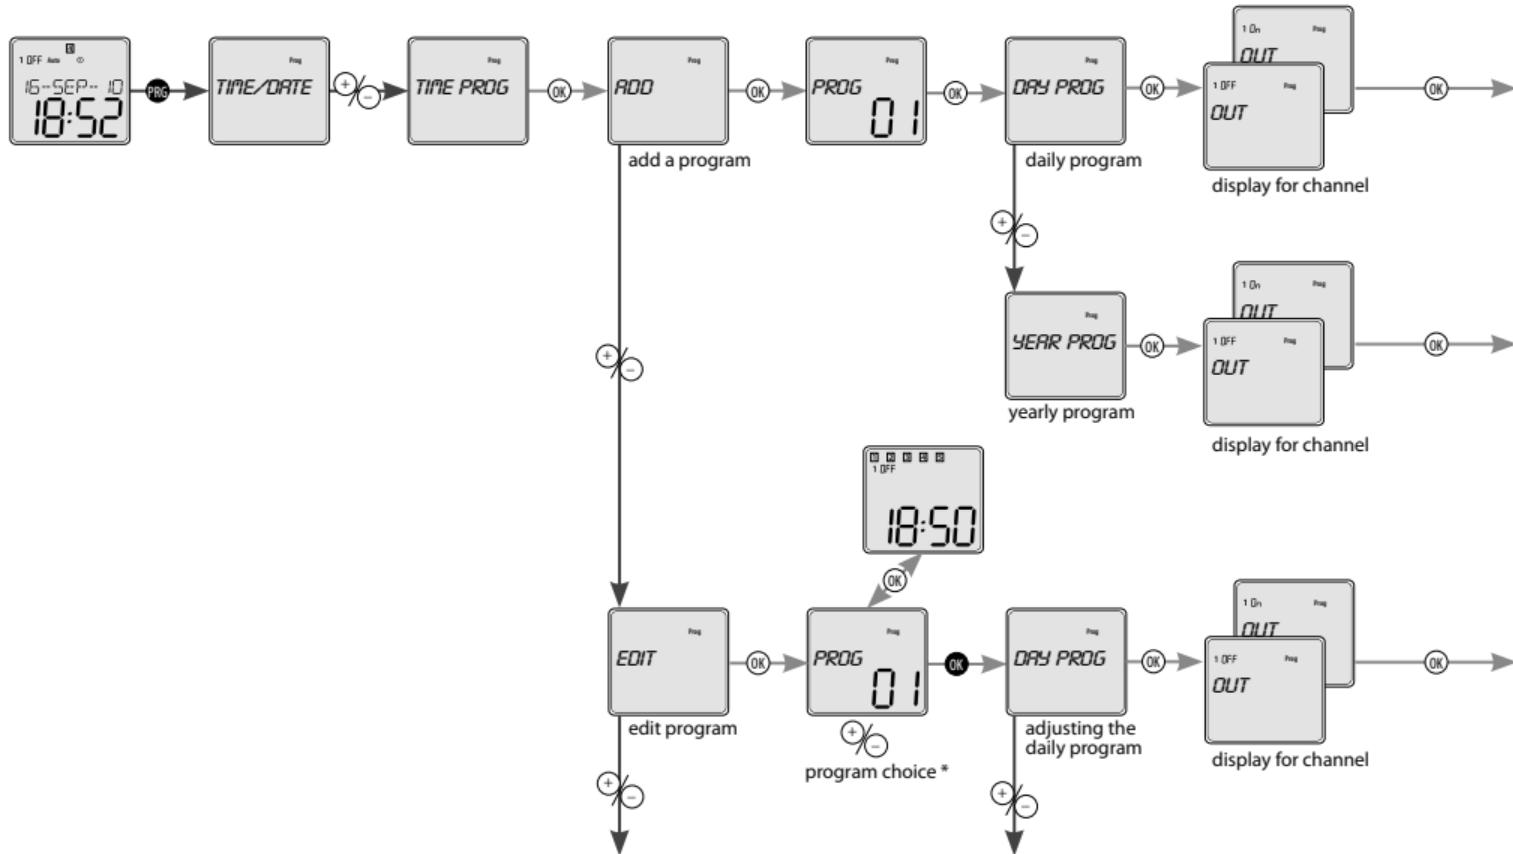

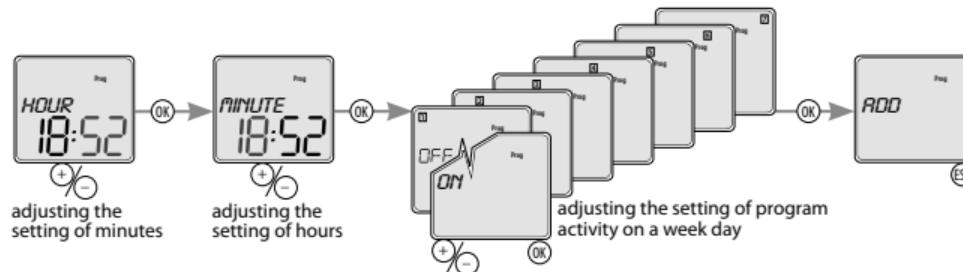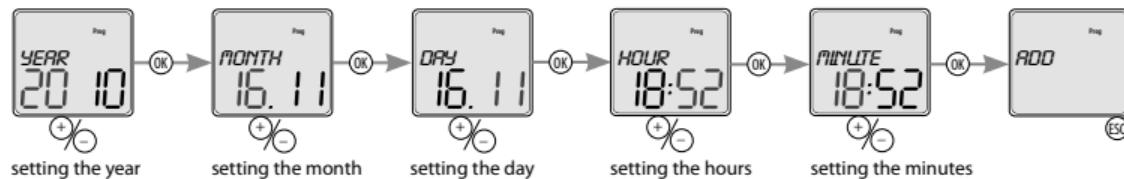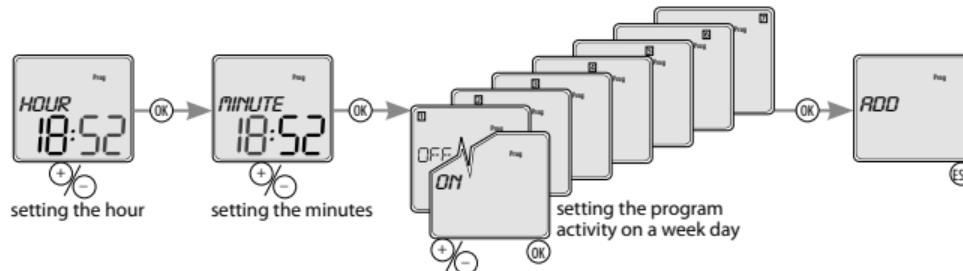


● - long press (>1s)
○ - short press (<1s)

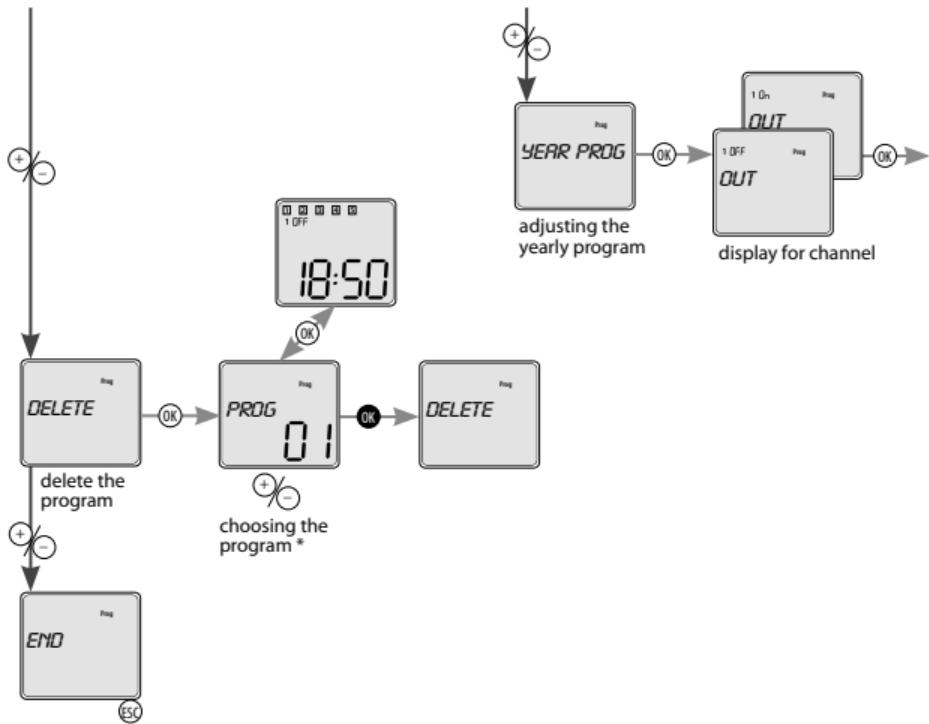

* By shortly pressing OK , you can toggle between the program number and the display of its settings. Use OK to toggle preset programs. By holding OK you can proceed with the required step - *CHANGE / DELETE*. If you do not want to proceed, press ESC to go to the main settings without any change.


If the program memory is full, you will see *FULL* on the display.


If the programs memory is empty and you want to change or erase a program, the display will read *EMPTY*

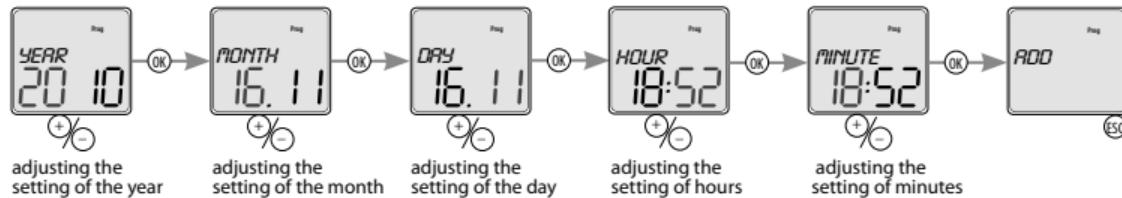

● - long press (>1s)
○ - short press (<1s)

Modes | Setting the switching modes

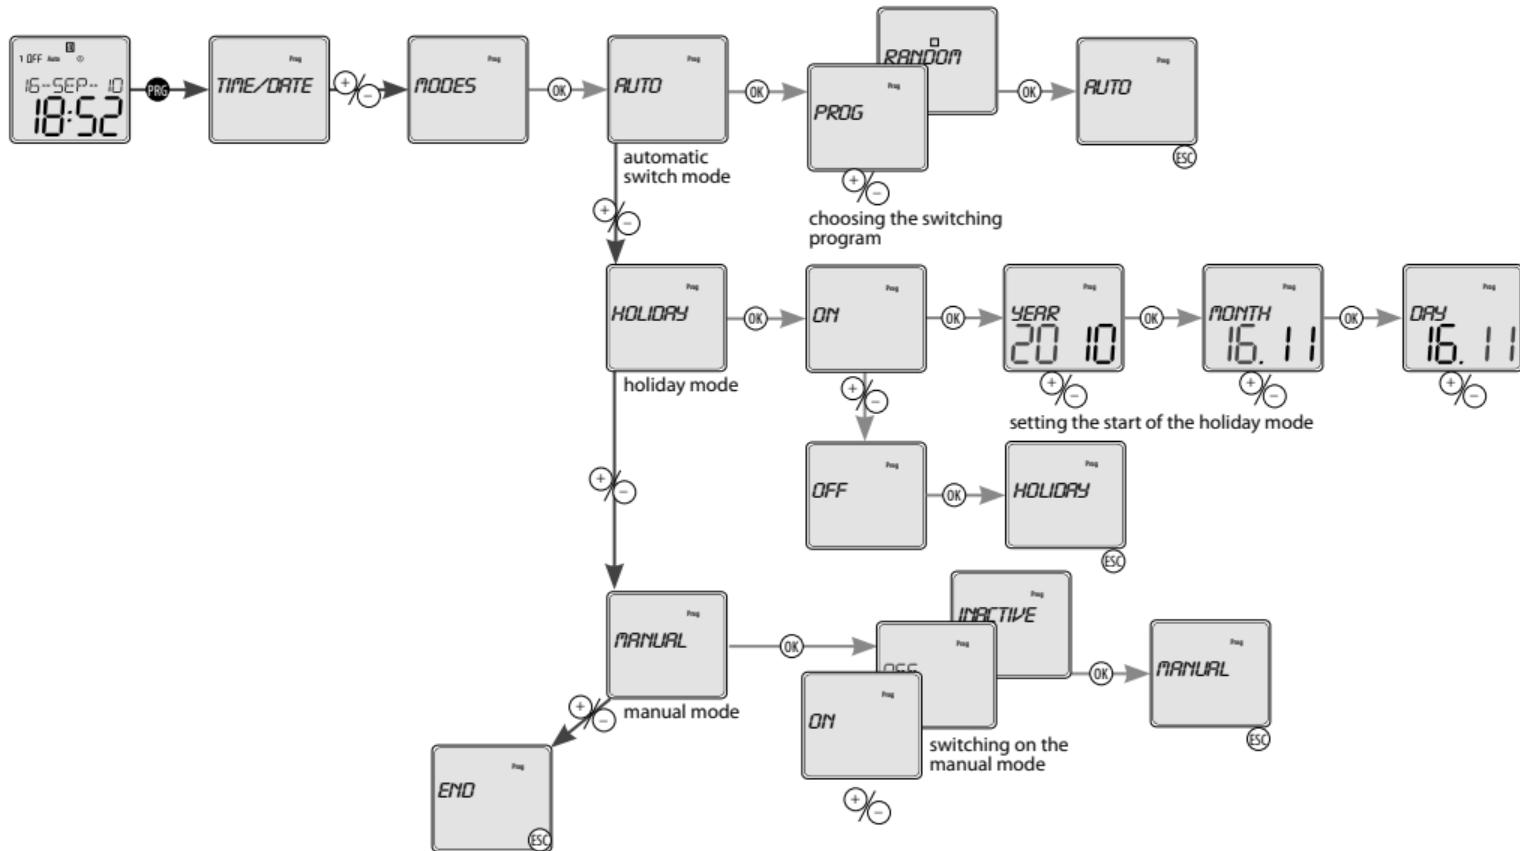

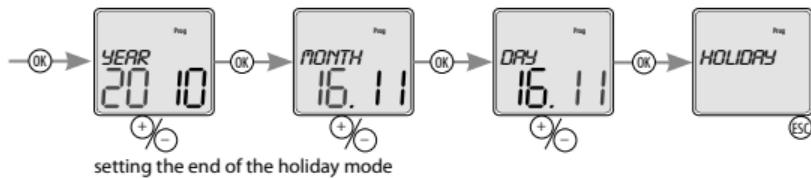



What you see on the display:

- when a random mode is activated - *RANDOM* - the symbol is lit
- vacation mode *HOLIDAY*:
 - the illuminated symbol
 - the flashing symbol
 - the symbol
- when the manual mode is activated, the symbol is lit and the manually controlled channel is flashing.

● - long press (>1s)
○ - short press (<1s)


OPTIONS Settings options

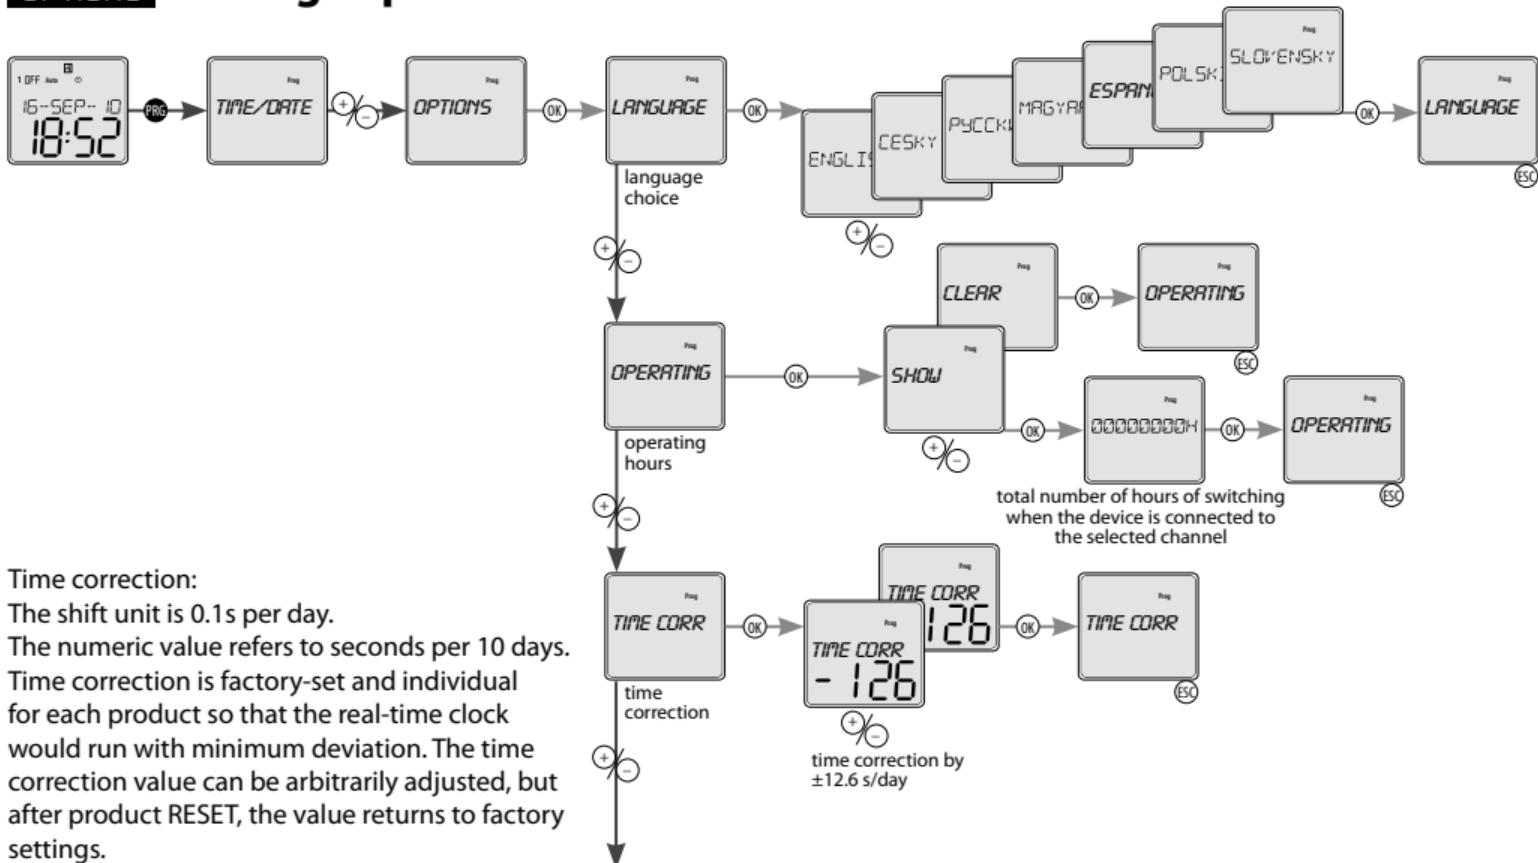

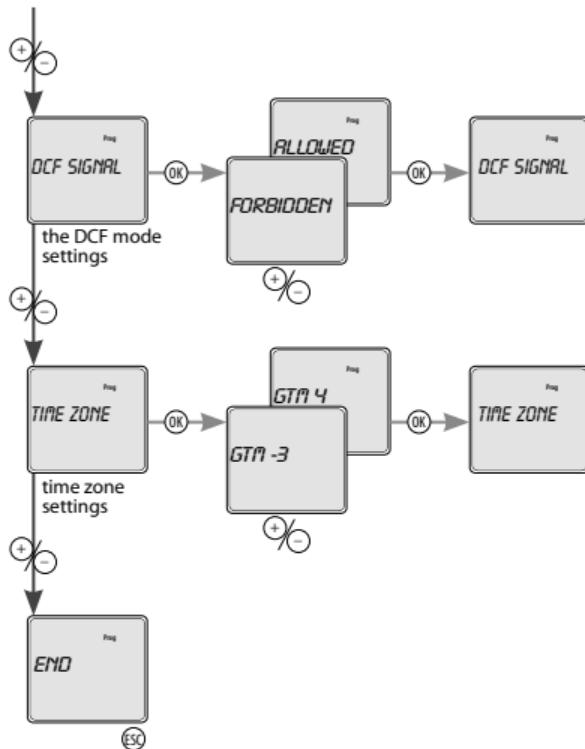


● - long press (>1s)
○ - short press (<1s)

Overview of time zones

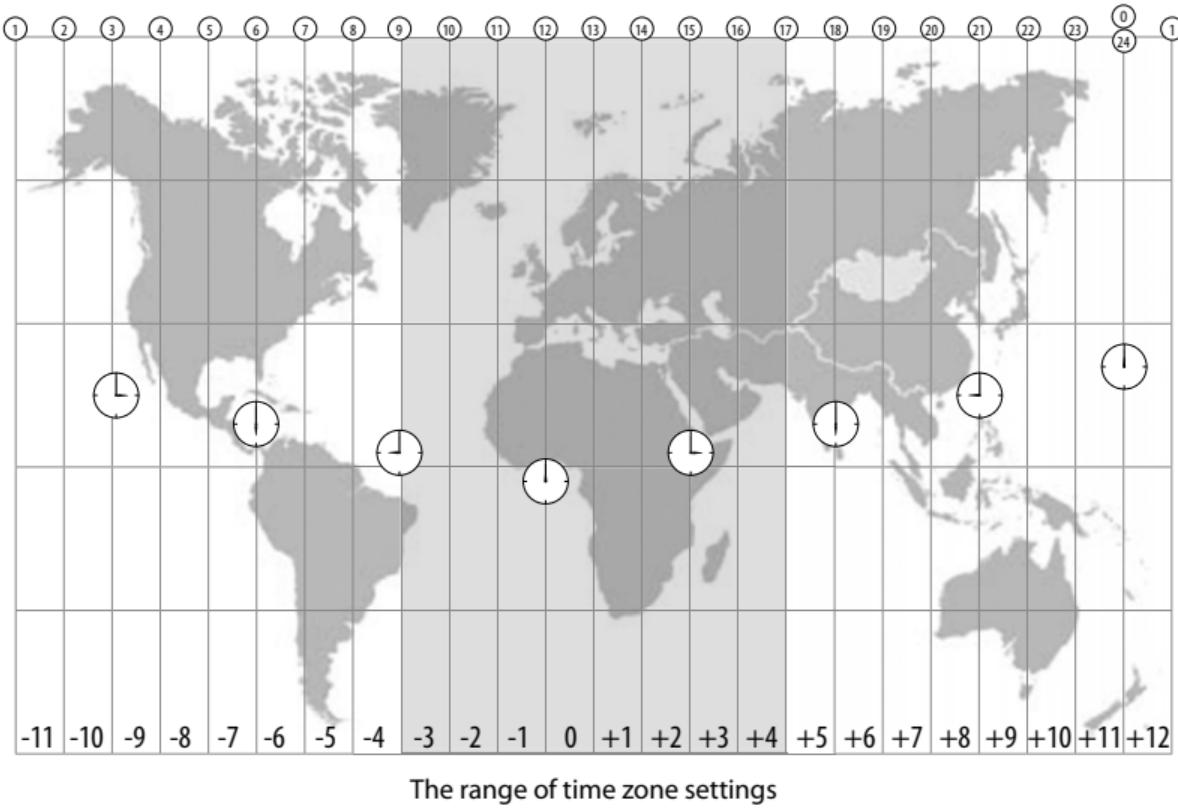

Reset

EN

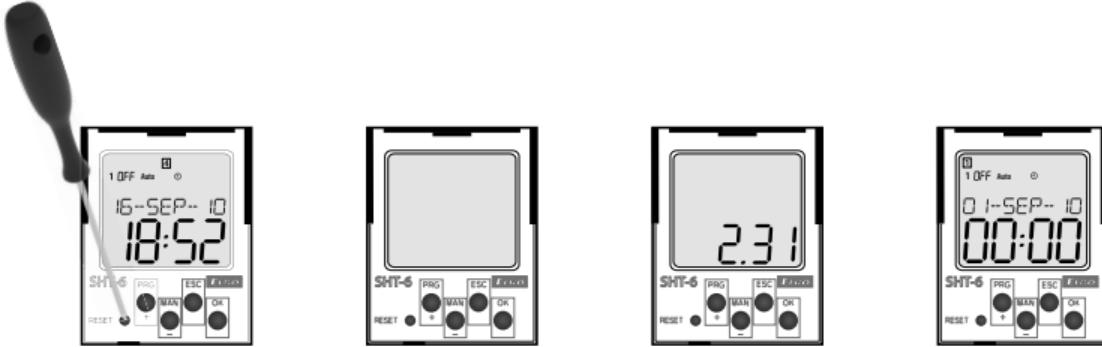


Performed by a short press of the hidden RESET button with a blunt-pointed object (e.g. a pencil or screw-driver with a diameter of at most 2 mm).

The type of device and software version will be displayed for 1 second, then the device will enter default mode. This means that the language is set to EN, all data is zeroed (thermostat function, time/date, user programs, device options function).


An example of SHT-6 programming

Set-up the relay switch on at 8 AM and the relay switch off at 9 PM for days Mo – Fri.

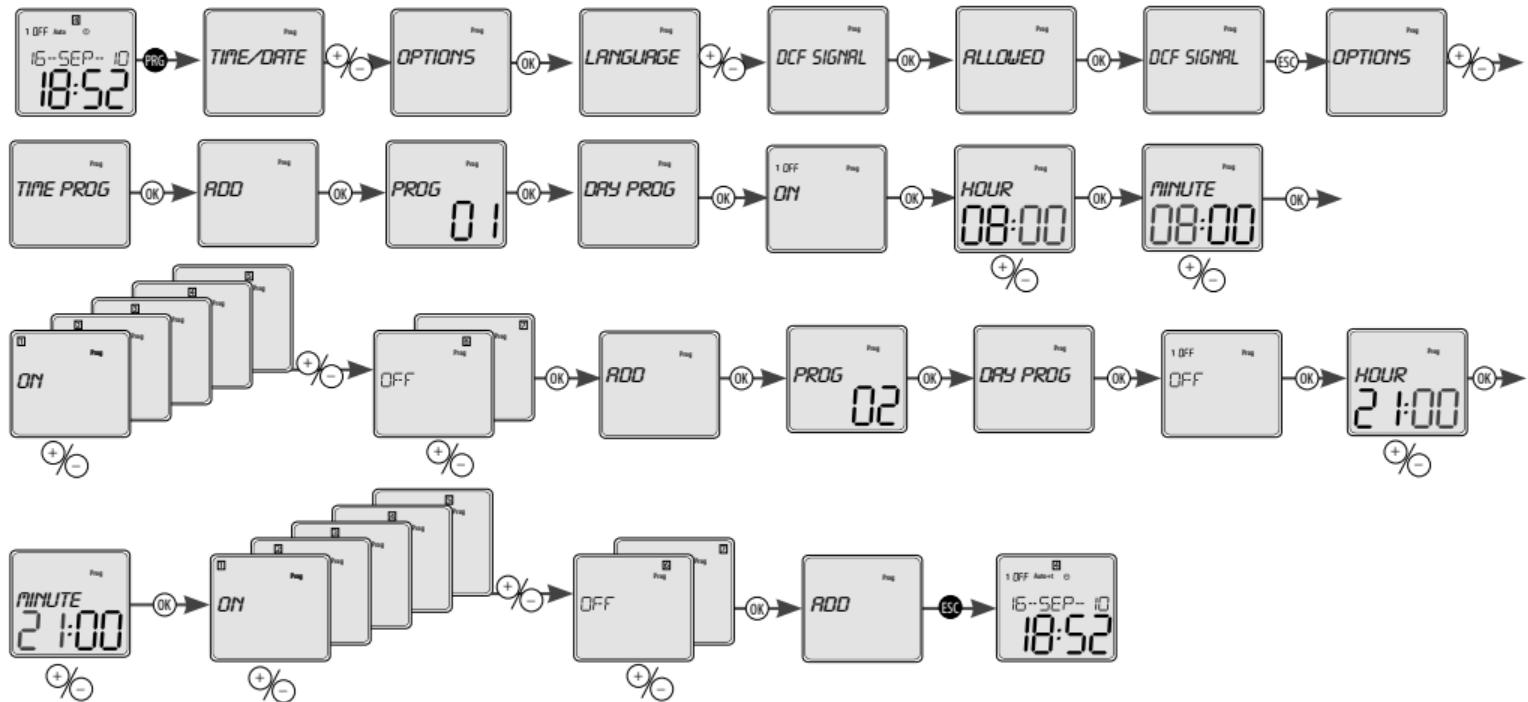

● - long press (>1s)
○ - short press (<1s)

Battery replacement

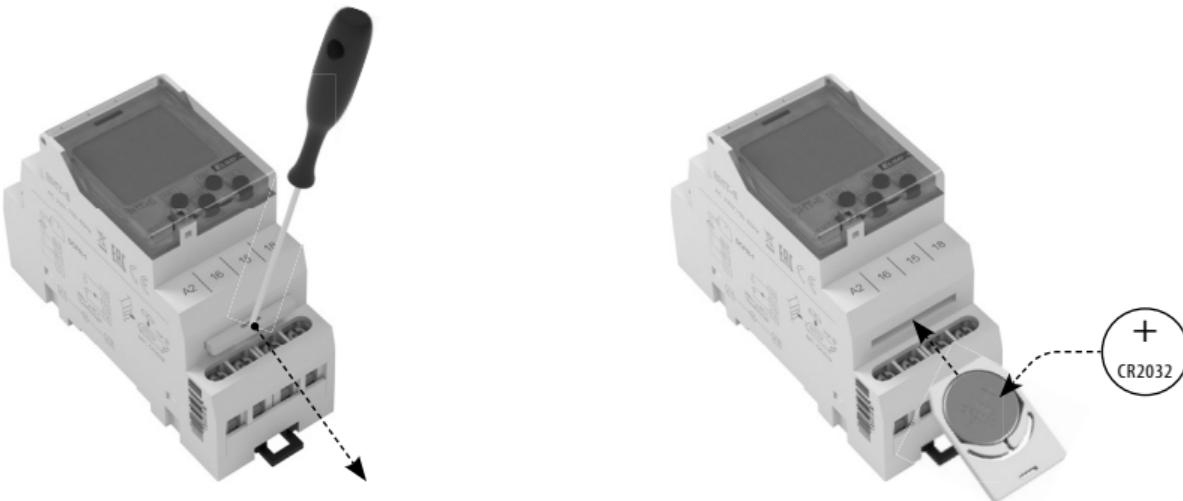

You can change the battery without disassembling the device.

CAUTION

- only change the battery when the device is disconnected from power supply!!!
- the date and time must be reset after changing the battery!!!

- remove the plug-in module with the battery
- replace the original battery
- enter a new battery so that its upper edge (+) lines up with the plug-in module
- slide the plug-in module in the device and pay attention to polarity (+ up) - for roughly 1 s, the display will show the name and the software version
- you can connect the device to power supply

ELKO EP, s.r.o.

Palackého 493, 769 01 Holešov, Všetuly
Czech Republic

Tel.: +420 573 514 211

e-mail: elko@elkoep.com, www.elkoep.com

02-25/2017 Rev.: 1